



AA-K21S

User Manual



AIWA Electronics International Co., Ltd
Explore more at www.int-aiwa.com

Boil to 100 °C (DEFAULT SETTING)

Plug it to a suitable power source and press the ON/OFF button to turn on the kettle. The kettle will power off automatically after 3 minutes.

Heat to desired water temperature and keep warm

Adjust target temperature using buttons. (± 5 °C)

Minimum Temperature: 40 °C
Maximum Temperature: 90 °C

Press the ON/OFF button to confirm and start heating

KEEP WARM function will be automatically triggered upon reaching the desired temperature. (120 Minutes)

This function can be cancelled by pressing the ON/OFF button again

Cleaning and Maintenance

- Before cleaning, unplug the appliance and wait for the appliance to cool down
- Use a soft damp cloth to clean the housing of the device.
- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Never immerse the kettle and base in water or any other liquids.
- The device should be regularly decalcified. Use a descaling product which is suitable for household appliances.
- Rinse the kettle several times with clean water after descaling

Intended use

This Electric Kettle is intended for private use & for boiling drinking water only. It is not suitable for use with other liquids and should not be used commercially.

This appliance fits all the relevant norms and standards related to the CE conformity standards. Any attempt to modify, alter, dismantle the appliance is dangerous and may result in the product being no longer safe to use and failing to meet the relevant conformity standards.

Technical specifications

Model: AA-K21S
Operating voltage: 220 -240V AC, 50-60HZ
Power: 1850 W to 2200 W
Power cord length: 75cm
Capacity: 1,7 (Max) Liters
Indicators: power indicator when kettle is switched on Safety class I

Safety Instructions

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
2. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved Children shall not play with the appliance.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard
4. For household use only.
5. If the kettle is overfilled, boiling water may be ejected
6. The kettle is only to be used with the stand provided

Troubleshooting


| Problem | Possible causes | Suggested solution |
|---------------------------------------|--------------------------------------------------------------|---------------------------------------------|
| Functions cannot be activated | Appliance is not plugged in | Connect the plug into the socket |
| | Socket is defective | Check the socket with different appliance |
| | Appliance is not placed on base correctly | Position it properly |
| Water doesn't heat up | Safety cut-out is activated | Appliance needs to cool down or be descaled |
| | The water container temperature is higher than that selected | Select a higher temperature |
| Heating-up takes longer than expected | Build-up of scale deposits | Descale the appliance |
| Increased noise during heating | Build-up of scale deposits | Descale the appliance |

7. Warning: Avoid spillage on the connector
8. Warning: Potential injury from misuse
9. The heating element surface is subject to residual heat after use.
10. The appliance must not be immersed.
11. Do not remove the lid while the water is boiling
12. Position the lid so that steam is directed away from the handle

Product Description

- SUS304 Stainless Steel Body
- British Strix Controller
- Real time water temperature LED display
- Designed to heat water up to the designated temperatures for various uses (Different temperatures of water required for different beverages; Coffee, Tea etc.)

Product Overview

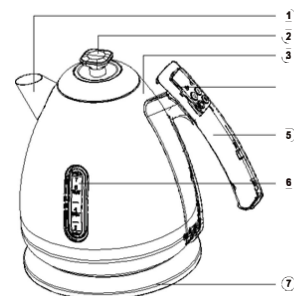

- ① Spout
- ② Lid
- ③ Kettle Housing
- ④ LED Display Control Panel
- ⑤ Handle
- ⑥ Water Gauge
- Base Plate

Environment

This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection



OPERATING INSTRUCTIONS



| ICON | DESCRIPTION |
|------|-------------------------|
| | On / Off button |
| | Keep warm / heat up |
| | Temperature up button |
| | Temperature down button |
| | Display |

Before first use

- Remove all stickers, protective foils and plastics from the device
- Place kettle on a flat, stable surface and ensure a minimum of 10cm free space around the kettle.
- The kettle is not suitable for use in a cabinet or outside use.
- Before first use, please boil a full kettle of water to clean to kettle. Discard the water afterwards.
- Connect the power plug to a suitable socket. (Please make sure the indicated voltage on the device matches the local voltage before connecting the device. Voltage 220V-240V, 50-60Hz)

Operating Instructions

Thermal safety cut-out

The pre-set thermal safety cut-out protects the heating element from overheating should the appliance be erroneously switched on without any water, or if the heating plate is calcified. If the safety cut-out is activated, the appliance cannot be switched on again. In such a case, the appliance must be allowed to cool down or must be descaled before it is switched on again

Always fill up the kettle to a SAFE water level.

MINIMUM SAFE WATER LEVEL: 500ml
MAX. SAFE WATER CAPACITY: 1.7 L



A IWAelectronics International Co., Ltd
Explore more at www.int-aiwa.com



E-Manu download



Mindrops AG
Bahrhofstraße 17
8006 Ebers
Germany