

SB-X100User Manual



 
Product List







Instructions



- Power button
- 2. Play/Pause/TWS connection/BT Disconnection
- 3. Volume-/Previous track 4. Volume+/Next track
- 5. AUX in slot 6. Micro USB charging slot

Power button

To turn on SB-X100,press and hold the Power button **()** for 2 seconds

Play/Pause/TWS connection/BT Disconnection

1.BT,AUX play Mode,Short press " \(\) " to Pause music, press again to replay.BT play mode, long press " \(\) " to disconnect BT.

2.TWS mode, double press " state of the connection TWS.

Previous Track/Volume-

Next Track/Volume+

BT,AUX play mode, short press " + " to go to next track, AUX play mode do not support turn to the next track. Long press " + " to increase the volume

AUX Connect

Turn on the speaker, insert 3.5mm audio cable, white indicator on, music playing from external audio source device Automitically



Micro USB charging slot

Please insert our provided cable connect with 5V/1A power supply in to Micro USB charging slot.(Please purchase power supply by yourself)



BT connect


Turn on the speaker, BT indicator light flash,open your bluetooth device to search "SB-X100" and connect it. BT indicator light stay on, BT connected sucessfully.





TWS Play Mode:

Turn on the 2pcs of SB-X100 (no need Synchronous boot), double press TWS connect button for 2 speakers, speaker are ready to pair after one beep.After connected successfully, one of the speaker's BT indicate light flash (this unit is Host left channel), and the other one's BT indicate light stay on(this unit is Secondary right channel), open BT device and search "SB-X100", select and connect it. connected successfully after one beep. BT indicator light stay on after music playing. both unit support button operation.

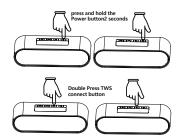

TWS disconnection

Long press TWS connect button of Host left channel unit, 2 speakers drop out of the TWS mode, disconnect with BT device at the same time. Long press TWS connect button of secondary right channel unit, 2 speakers drop out of the TWS mode, Host unit keep connecting with BT devices and keeping play music

Two device connection modes: (BT mode)

- 1.When playing music, long press play/pause button to disconnect current BT. then can connect with multiple devices after disconnected succeffully.
- 2. Another BT device connected with speaker first, then the old BT device connect with speaker, 2 BT devices connect with speaker successfully.
- 3.Speaker will play the first connected device, the other device can be playing only pause the first one.

LED Indicator light

Blue BT mode: Flash quickly Flash slowly

BT ready to pair BT connected successfully Playing music Slowly Pause

White AUX mode: Stay on AUX IN Playing Flash slowly Pause

Stay on

Orange Light: Flash slowly Battery low,battery voltage less than 6.8V

Red light: Stay on charging
Green light: Stay on Full battery

Calling coming call Bluelight flash slowly

Low battery requirement:

When battery is low, Speaker will send out low battery alarm beep, Orange LED on one beep each 15S, speaker will turn off after 3 beeps.

Specification

•	
Item:Bluetooth speaker	Model name:SB-X100
Rated Voltage:DC5V	Bluetooth version:4.2
Rated input current:1A	Support Audio format:aptX/SBC/AAC/MP3
Bluetooth working rang:20M	Battery:18650 /2000mAh
Output:10W*2	Charging time:3~4Hours
Play time:4-6Hours	Weight:960g
Dimension:190*53*60mm	



Aiwa Electronics Int'l Co., Ltd. Explore more at www.int-aiwa.com