 
aiwa

SB-X120

User Manual




Product List





3.5mm line-in AUX cable

Instructions

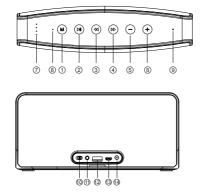

- 2.Play/Pause/TWS connection/BT Disconnection/Hand-free call
- 3. Previous track
- 4.Next Track
- 5.Volume -
- 6.Volume + 7.Battery life indicator light
- 8.Status indicator light
- 9.Microphone
- 10.Power switch button
- 11.AUX in slot 12.USB play slot
- 13.Micro USB charging slot
- 14.18V adaptor charging slot

Power on/off

1.Switch Power button to on, bluetooth indicate light flash.

Short press "M" button, Mode Switch order is BT-USB PLAY-AUX. BT mode is Default mode for power

Play/Pause/TWS connection/BT disconnection

BT,AUX,USB play Mode,Short press " (x)" to Pause music, press again to replay.

TWS mode , double press " (\mathbf{a}) " to connection TWS. BT play mode, long press " $\ ^{\prime\prime}$ to disconnect BT.

When have coming Call , Short press " (\mathfrak{D}) " Answer the call , Long press to reject the call Short press to hangup the call

Previous Track

BT,USB play mode, short press " $\ \ \, \ \ \,$ " to go to previous track , AUX play mode do not support.

Next Track

BT , USB play mode , Short press " $\ensuremath{\mathfrak{B}}$ " to go to next track , AUX play mode do not support.

Volume -

BT , USB , AUX play mode, press " — " to decrease the volume

Volume +

BT , USB , AUX play mode , Press " $\stackrel{\cdot \cdot \cdot}{\bullet}$ " to increase the volume

Micro USB charging slot

Please insert our provided cable connect with 5V/1A power supply in to Micro USB charging slot.(Please purchase power supply by yourself)



Fast Charge Slot

Please use 18V/2A adaptor insert into Fast charge slot (Please purchase power adapotor by yourself)



Turn on the speaker, insert the $\mbox{\sc U-disk}$, Orange indicator on, Music Playing from U-disk Automitically

AUX Connect

Turn on the speaker, insert 3.5mm audio cable, white indicator on , music playing from external audio source



BT connect

Turn on the speaker, BT indicator light flash,open your bluetooth device to search" SB-X120" and connect it. BT indicator light stay on, BT connected sucessfully.

 




TWS Play Mode:

Turn on the 2pcs of SB-X120 (no need Synchronous boot), double press TWS connect button for 2 speakers, speaker are ready to pair after one beep. After connected successfully, one of the speaker's BT indicate light flash (this unit is Host left channel), and the other one's BT indicate light stay on(this unit is Secondary right channel), open BT device and search "SB-X120", select and connect it. connected successfully

after one beep. BT indicator light stay on after music playing. both unit support button operation.



TWS disconnection

Long press TWS connect button of Host left channel unit, 2 speakers drop out of the TWS mode, disconnect with BT

Long press TWS connect button of secondary right channel unit, 2 speakers drop out of the TWS mode, Host unit keep connecting with BT devices and keeping play music

Two device connection modes: (BT mode)

1. When playing music, long press play/pause button to disconnect current BT. then can connect with multiple devices after disconnected

2. Another BT device connected with speaker first, then the old BT device connect with speaker, 2 BT devices connect with speaker successfully.

3.Speaker will play the first connected device, the other device can be playing only pause the first one.

LED Indicator light

Flash quickly BT ready to pair

Flash slowly BT connected successfully Stav on Playing music

AUX IN Playing White AUX mode: Stav on Flash slowly Pause Orange USB mode: Stay on **USB Play**

Flash slowly Pause

Calling coming call Bluelight flash slowly

Battery indicator light: White light

- (A).Charging, Flashing from the lowest battery indicator to the
- (1).Battery at 0-25%,Charging is shown as flashing water from the leftmost lamp to the right.
- (2).Battery at 25-50%,The charging display shows that the leftmost light is long, the n the water is flashing to the right. (3).Battery at 50-75%,The charging display shows that the two left
- lights are long, then the water is flashing to the right.. (4).Battery at 75%-99%,The charging display shows that the leftmost three lights are on and the rightmost LED is blinking.
- (5). Fully Charged: all battery indicator light on. (B). Speaker on without charging, indicator light stay on for function.

Low battery requirement :

When battery is low, Speaker will send out low battery alarm beep, one beep each 15S, speaker will turn off after 3 beeps.

Item:Bluetooth speaker	Model name:SB-X120
Rated Voltage:DC5V	Bluetooth version:4.2
Rated input current:1A	Support Audio format:aptX/SBC/AAC/MP3
Bluetooth working rang:20M	Battery:18650 /2600mAh
Mid&high driver output:10W	Bass driver output:20W
Play time:4-6Hours	Charging time:3~4Hours
Dimension:225*58*106mm	Weight:1100g

限用物質含有情況標示聲明

型號(型式):SB-X120 限用物質及其化學符號 電路板 揚聲器

係指限用物質之百分比含量超出百分比含量基準值

percentage value of presence condition.
備考2. "○" 係指該項限用物質之百分比含量未超出百分比含量基準值 備考3. "一"係指該項限用物質為排除項目

設備名稱:藍牙音箱

譽語: 經型式認證合格之低功率射頻電機,非經許可,公司、高號或使用者均不得擅自 變更頻率、加大功率或變更原設計之特性及功能。 安支湖平、加大河中以安支州政市之村1在及功能。 低功率射頻電機之使用不得影響飛航安全及干擾合法通信;經發現有干擾現象時, 應立即停用,並改善至無干擾時方得繼續使用。 前項合法通信,指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法

通信或工業、科學及醫療用電波輻射性電機設備之干擾。

製造商:東莞十和田電器科技有限公司 進口商:中華大雄股份有限公司 地址:新北市深坑區北深路三段141巷5號

電話: 02-2662-4343 商品原產地: 中國 (CHINA)